

## 2.4 Settings

In the 'Settings', you can configure below items depends on your requirement.

| Category      | Item                         | Note                                                                                                     |
|---------------|------------------------------|----------------------------------------------------------------------------------------------------------|
| General       | Room Name                    |                                                                                                          |
|               | Auto-Start NovoConnect Stage | After the option be activated, NovoConnect Stage will launch automatically when enter Windows OS system. |
|               | Background Image             |                                                                                                          |
|               | Logo & Welcome Message       |                                                                                                          |
| Configuration | Connection Display Settings  | Ex: Ethernet, Wi-Fi, Meeting ID, PIN code                                                                |
|               | Screen-Cast Configuration    | Ex: Enable Airplay & code.                                                                               |
|               | Calendar Display Settings    | Ex: Subject, Location, Organizer                                                                         |
|               | Setting Lock                 |                                                                                                          |

Configuration table

In additional, you also can pair Launcher for wireless screen mirroring, update software and enable software license.



Settings