

2.7.4 Removable Storage



1. In the **Duration** field, select how long each media file in the removable storage will be displayed in the layout item/box.
2. In the **View Type** field, select one of the following options to configure how the image/video will fit into the layout box:
 - **Stretch to fit region** – Stretches smaller images/videos horizontally so that they fit into the layout box.
 - **Fit region** – Scales the images/videos so that the full image fits into layout box.
 - **Scale to fill region** – Scales up smaller images/videos until the layout box is completely filled.
3. In the **Others** field, check any of the following options:
 - **Detect Picture Orientation** – Makes automatic corrections to the picture orientation.
 - **Stretch Video to Fill Region** – Stretches the video horizontally to fill the size of the box.
 - **Set as audio source** – Make the display broadcast the audio from the media file.
4. Select the type of storage device you are using, and then in the **Refresh Period** field select how often you want DS Playlist to check for new files stored in the path given.
5. Click **Save** to finish configuring the media settings.