

3.1.2 Control Buttons

Switch button

Press the **SWITCH** button to switch between full screen and split screen.

Touch Control button

Enables or disables the touchback function.

