


4.1 NT Settings

NT Settings contains **Network**, **Software Upgrade** and **Device Settings**.

The pictures below explaining the main functions of NT Settings and guiding you how is it working.


How to enter the NT Settings

 - Tap the **More Apps** at the bottom-center of the screen to open the Apps list
- Tap the **NT Settings** to enter.

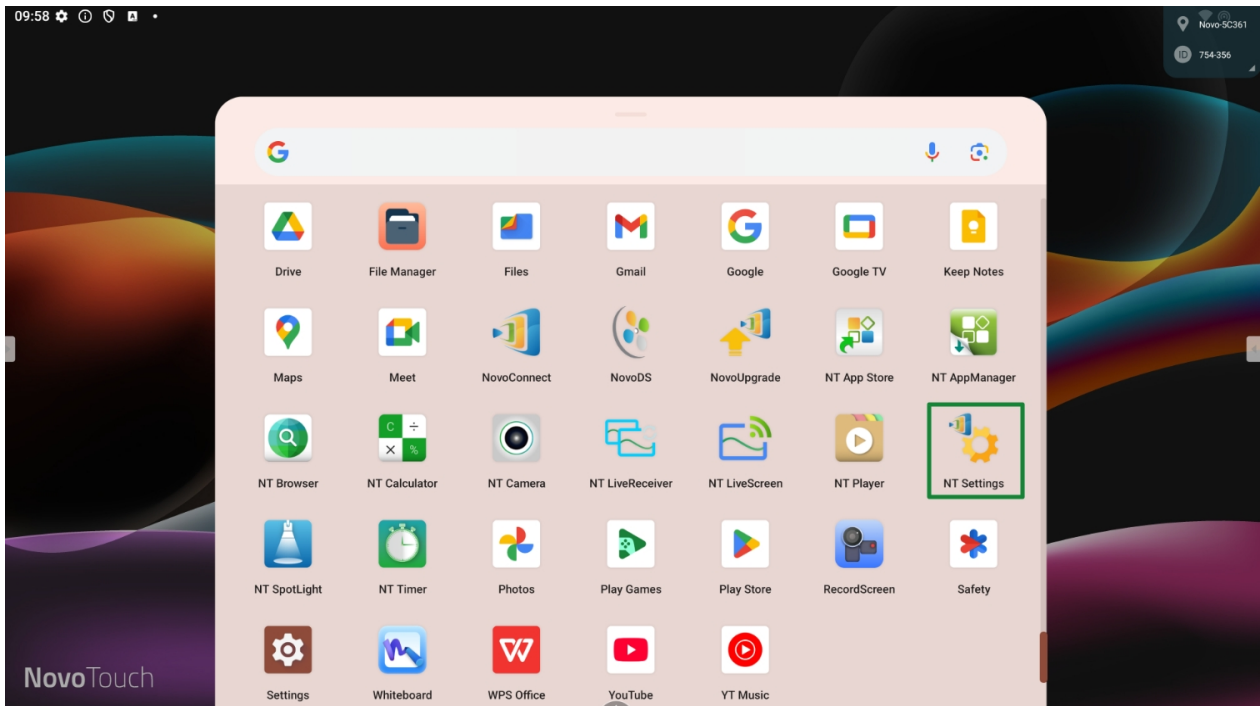


Home screen

 NT Settings Menu

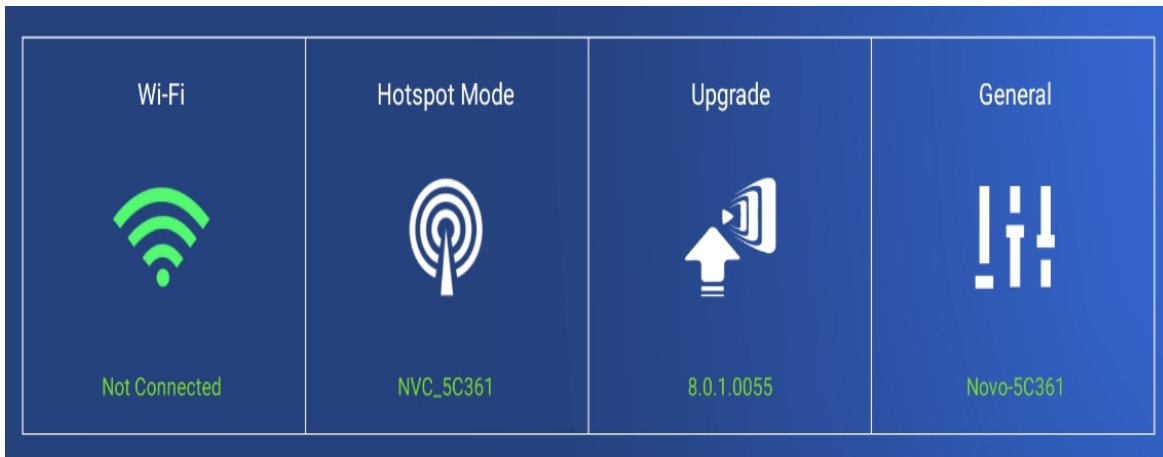

Wi-Fi Settings

 Wi-Fi Hotspot mode is factory default setting, you can switch it to **Connect to Wi-Fi** (AP-Client mode), or **Turn Wi-Fi off** (Radio off).

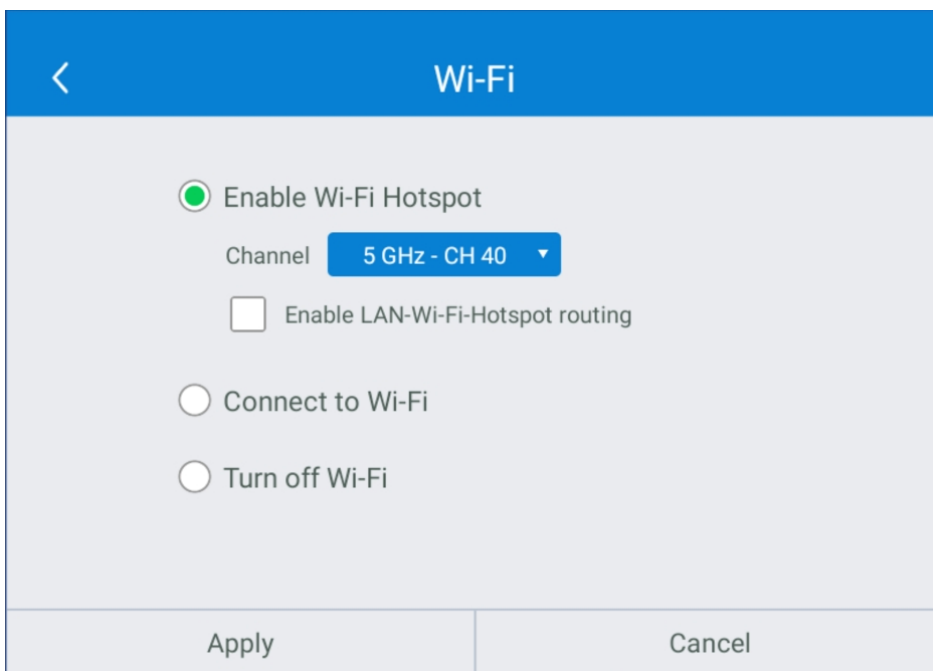

Wi-Fi Hotspot

Wi-Fi Hotspot mode also provide “**LAN-Wi-Fi-Hotspot routing**”, It means, when this option is enabled, both the two network will be the same routing, if NovoTouch connects both **Wireless** and **Wired** network.

Wi-Fi Frequency and Channel

Select Channel

2.4 Ghz

CH 1

CH 2

CH 3

CH 4

CH 5

CH 6

CH 7

CH 8

CH 9

CH 10

CH 11

5 Ghz

CH 36

CH 40

CH 44


CH 48



2.4/ 5 GHz Channel selection


Wi-Fi HotSpot mode provide **2.4GHz** and **5GHz**, they have **11 channels** and **4 channels** respectively. **5GHz** and **Channel 40** is factory default setting, you can change the frequency and channel anytime.

 Upgrade

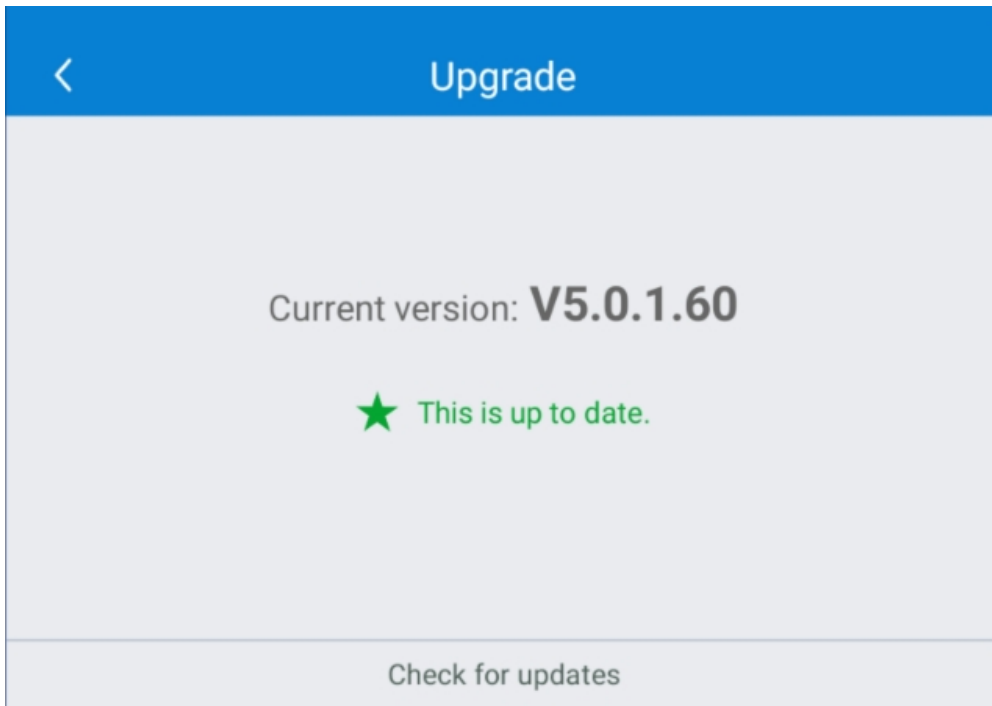

User can check the current software version here. And also if the updates available, user can perform online upgrade by tapping **Check for updates**. (Internet connection is needed for the process)

 
General Settings

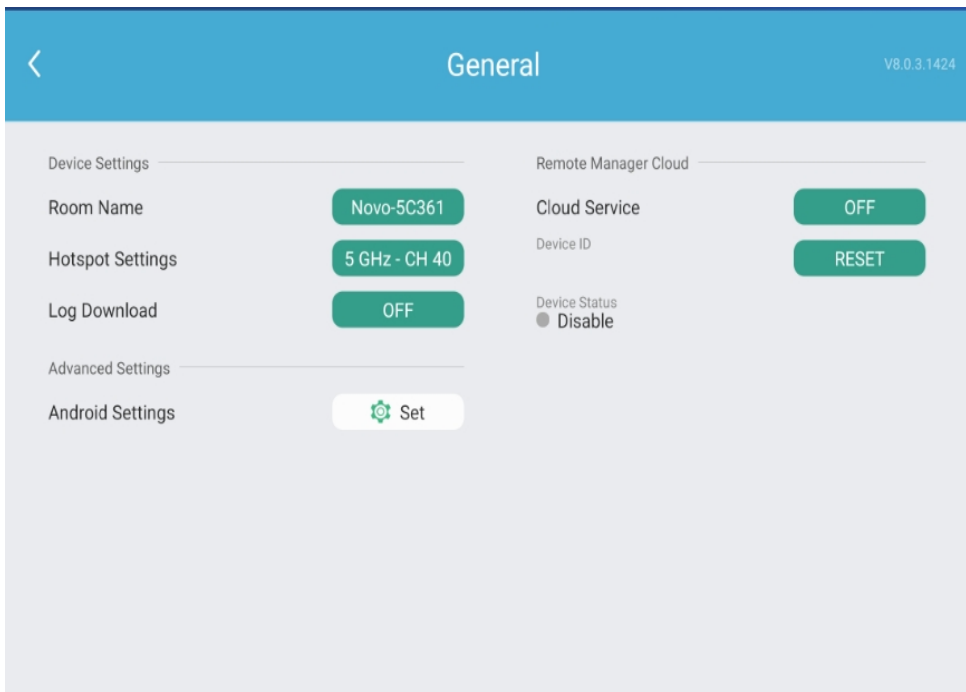

Here user can also perform the following settings:

- Change the device name

 User can change the device name for easily identifying the device or the location where the device is. This changing will also be displayed on the Home Screen of NovoTouch.

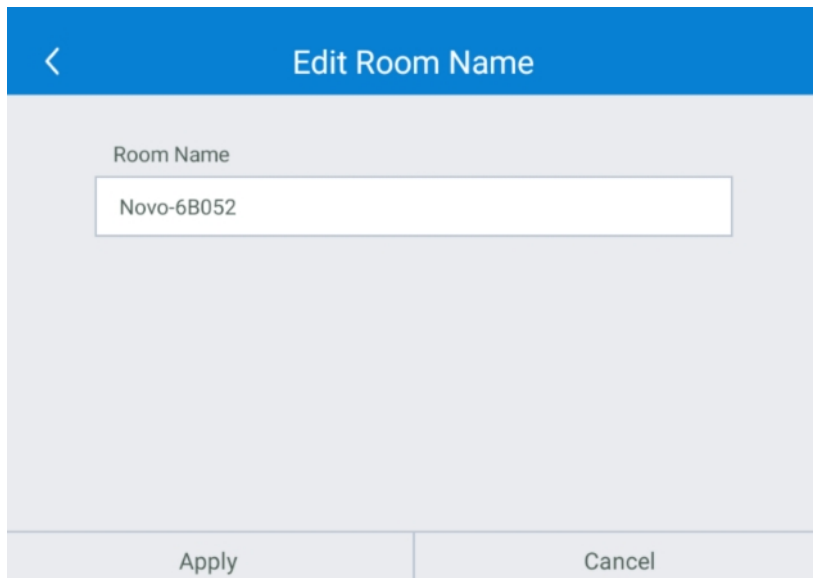

Room Name

Novo-6B052

 
Apply Cancel

Edit Room Name

Log Download.

Allow the log file to be downloaded for debugging.

- Enable or disable log download

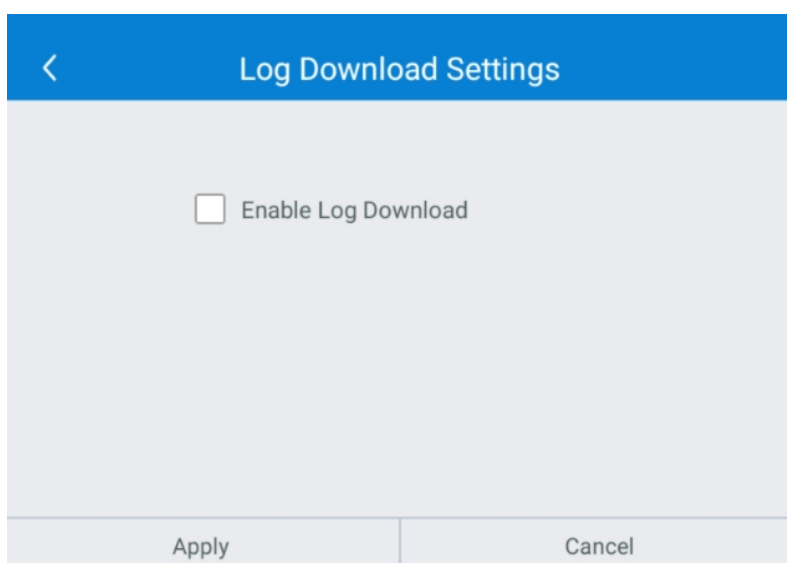

Log Download Settings

☐ Enable Log Download

Apply Cancel

Android settings.

- Click the icon **Set** to enter Android setting.